



Note:

Jet pump 1 is connected to water diverter valve, which is connected to group A and group B water distributor.
 Group A water distributor is connected to the A1; A2; A3 and A4 jets,
 Group B water distributor is connected to the B1 and B2 jets.
 Jet pump 2 is connected to the group C water distributor, which is connected to the C1 and C2 jets.
 The circulation pump 1 is connected to the Group D water distributor, which is connected to the D1 jets and UV sterilizer;
 The circulation pump 2 is connected to the Group E water distributor, which is connected to the E1 nozzle, fountain, and UV sterilizer;
 Jet Pump 3 is connected to the X swim jet and Group M water distributor, which is connected to the X1 jets,
 Jet Pump 4 is connected to the N swim jet.
 Jet Pump 5 is connected to the U swim jet and Group F water distributor, which is connected to the U1 jets,
 K air valve is connected to the A1; A2; A3; A4 and C1; C2 jets.
 J air valve is connected to the B1; B2 and D1 jets.
 L air valve is connected to the U1 jets and U swim jet.
 H air valve is connected to N swim jet.
 G air valve is connected to the X1; E1 jets and X swim jet.
 The air blower is connected to all bubble jets and aromatherapy tanks;
 The fountain is controlled by a water inlet switch;
 When connecting the water suction, connect them in parallel;
 The dotted circle indicates the range of the point.
 The air blower and fountain are optional, please pay attention to the configuration and order requirements.

5pcs jet pump+ 2pc circulation pump

Note: Jet pumps 3 and 5 need to be placed vertically when installing the water distributor.

ZR7860 Spa Front View